

1. Open the seal chamber of the front camera, as the follow pictures:

Use the hairdryer(hot air) blow the decorative ring of the camera about five minutes, then unscrew the seal chamber.



2. First use the blower clean the larger articles of dust. if the lens surface still have water damage or oil stain, need use lens paper to clean it as the follow steps:

1) First, take a piece of lens paper and fold it once or twice (do not fold too many times as the lens paper will get very sharp and the edges may scratch the lens glass surface).





II)Second,using high purity alcohol,moderately wet cotton swabs



III)Third,blow at lens glass surface in a breath,then use the lens paper to clean the glass surface.make sure to maintain an appropriate pressure for CCD with your hand.



Notice:due to the CCD sensor surface is too sensitive,please carefully when clean it,in case scratch the CCD sensor surface.So,if you have not the lens wipe experience,had better do not wipe the CCD surface.

Non-professional personnel do not operate it.